



For spare parts

- R545,23
- R545,113
- R545,112


refer to user manual



R540,40

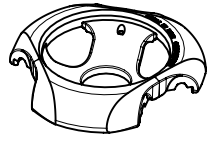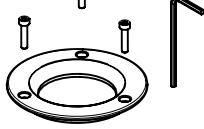


R545,01

 

R545,07

R545,112

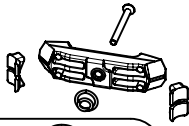

R545,02



R545,25
set of 6




R545,113



R545,02



R545,25
set of 6

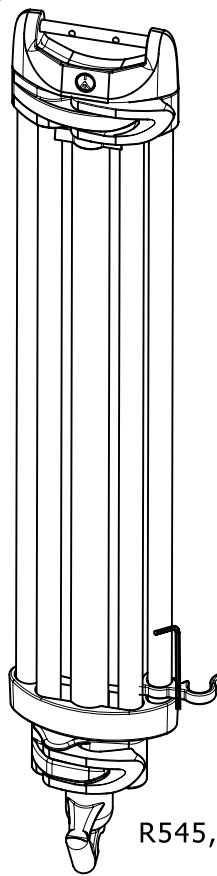

R545,23





R3,2336
set of 3



R545,22
set of 3

ART. MVTTWINGC
ART. MVTTWINGCUS

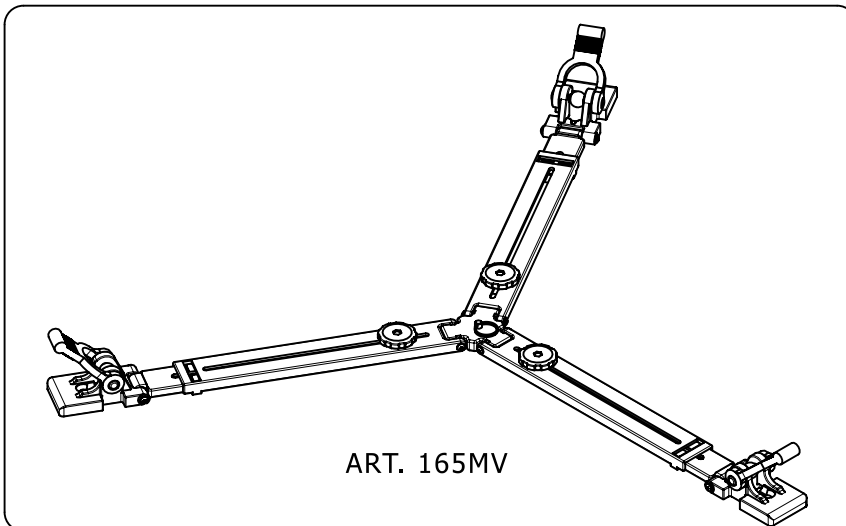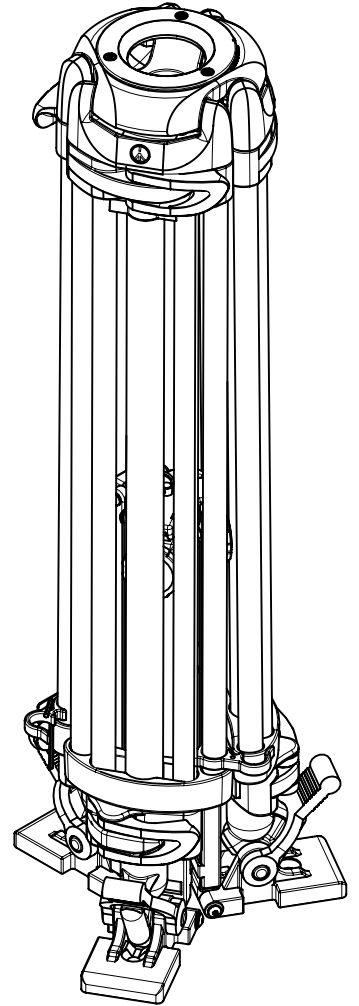

ART. 165MV

BOX

FOR MVTTWINGC see
RI,500,18,07 set of 4

FOR MVTTWINGCUS see
RI,500,18,08 set of 4